

# FIVE-UNIT POWER STATION

## Instruction Manual



**SENSIDYNE®**

1000 112<sup>th</sup> Circle N, Suite 100 • St. Petersburg, FL 33716 USA  
(800) 451-9444 • (727) 530-3602 • (727) 539-0550 [FAX] • [www.sensidyne.com](http://www.sensidyne.com)

REF 360-0130-01 (Rev B)

## **PROPRIETARY NOTICE**

This manual was prepared exclusively for the owner of the Gilian Five Unit Power Station. The material within this manual is proprietary information and is to be used only to understand, operate, and service the instrument. By receiving this document, the recipient agrees that neither this document nor the information disclosed within nor any part thereof shall be reproduced or transferred, physically, electronically or in any other form, or used or disclosed to others for manufacturing or for any other purpose except as specifically authorized in writing by Sensidyne, LP.

## **COPYRIGHT NOTICE**

© 2009 Sensidyne, LP All Rights Reserved. No part of this document may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form by any means without the prior written permission of Sensidyne, LP.

## **TRADEMARK NOTICE**

Sensidyne, the Sensidyne logo, Gilian, and the Gilian logo are registered trademarks of Sensidyne, LP Gilian 5000 and the Gilian 5000 logo are trademarks of Sensidyne, LP. These trademarks are protected through use and registration in the United States. Other trademarks and servicemarks used in this document are the property of their respective companies and are used only for informational and explanatory purposes.

## **DISCLAIMER**

THE SELLER ASSUMES NO RESPONSIBILITY WHATSOEVER, TO ANY PARTY WHOSOEVER, FOR ANY PROPERTY DAMAGE, PERSONAL INJURY, OR DEATH RECEIVED BY OR RESULTING FROM, IN WHOLE, OR IN PART, THE IMPROPER USE, INSTALLATION, OR STORAGE OF THIS PRODUCT BY THE USER, PERSON, FIRM, ENTITY, CORPORATION OR PARTY NOT ADHERING TO THE INSTRUCTIONS AND WARNINGS IN THIS MANUAL, OR OTHERWISE PROVIDED BY THE SELLER OR FROM NOT ADHERING TO ALL FEDERAL, STATE, AND LOCAL ENVIRONMENTAL AND OCCUPATIONAL HEALTH AND SAFETY LAWS AND REGULATIONS.

THE SELLER SHALL NOT BE LIABLE FOR DIRECT, INDIRECT, CONSEQUENTIAL, INCIDENTAL OR OTHER DAMAGES RESULTING FROM THE SALE AND USE OF ANY GOODS AND SELLERS' LIABILITY HEREUNDER SHALL BE LIMITED TO REPAIR OR REPLACEMENT OF ANY GOODS FOUND DEFECTIVE. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR USE OR FOR A PARTICULAR PURPOSE WHICH ARE EXPRESSLY DISCLAIMED.

## **READ AND UNDERSTAND ALL WARNINGS AND INSTRUCTIONS BEFORE USE**

Failure to read, understand, and comply with ALL accompanying literature, product labels, and warnings could result in property damage, severe personal injury, or death.

Read and understand ALL applicable environmental health and safety laws and regulations. Ensure complete compliance with ALL applicable laws and regulations before and during use of this product.


DO NOT remove, cover, or alter any label or tag on this product, its accessories, or related products.

UNDER NO CIRCUMSTANCES should this product be used except by qualified, trained, technically competent personnel.

DO NOT operate this product should it malfunction, require repair, or have a cracked or broken case.

If further translation is required, please contact the Sensidyne EU Authorized Representative (see Back Cover for contact information).

## Five-Unit Power Station Set up

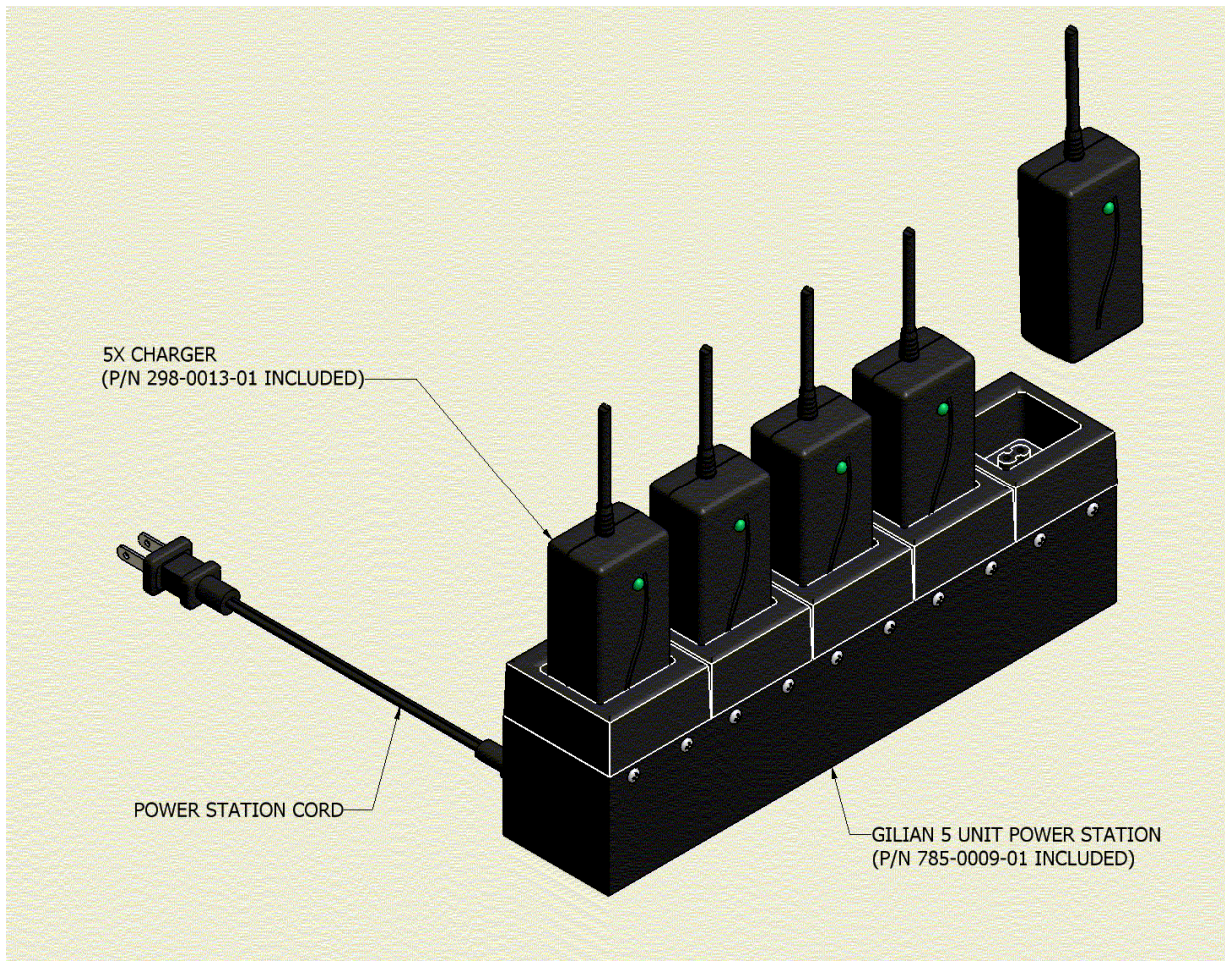

Firmly Seat up to five Sensidyne, Desktop Style, C8 Input Chargers into Five-Unit Power Station.

Attach Power Cord to Power Station Inlet Module.

Attach Cord to Power Source.

Turn on Power Station Inlet Module Switch.

Refer to Owners Manual of Pump being used for Charger operation.

**Spare Parts & Accessories**

<b>Part Number</b>	<b>Description</b>
401562	100-240Vac, 50-60 Hz, US Cord (for Five-Unit Power Station)
700707	100-240Vac, 50-60 Hz, Euro Cord (for Five-Unit Power Station)
297-0009-01	100-240Vac, 50-60 Hz, UK Cord (for Five-Unit Power Station)
297-0006-01	100-240Vac, 50-60 Hz, US Cord (for Single Charger)
297-0007-01	100-240Vac, 50-60 Hz, Euro Cord (for Single Charger)
297-0008-01	100-240Vac, 50-60 Hz, UK Cord (for Single Charger)

## **Factory Service**

### **USA**

**Sensidyne, LP  
1000 112<sup>TH</sup> Circle N, Suite 100  
St. Petersburg, Florida 33716 USA**

**800-451-9444  
727-530-3602  
727-539-0550 [Main fax]  
727-538-0671 [Service fax]  
e-mail: [info@sensidyne.com](mailto:info@sensidyne.com)  
web: [www.Sensidyne.com](http://www.Sensidyne.com)**

### **Europe**

**Goffin Meyvis  
Analytical and Medical Systems B.V.**

**Deliveries:  
Ecustraat II  
4879 NP Etten Leur  
The Netherlands**

**Mail:  
P. O. Box 251  
4870 AG Letten Leur  
The Netherlands**

**+31 (0)76 5086000  
+31 (0)76 5086086 [fax]  
e-mail: [info@goffinmeyvis.com](mailto:info@goffinmeyvis.com)  
web: [www.goffinmeyvis.com](http://www.goffinmeyvis.com)**

**Manufactured by:**

Sensidyne, LP  
1000 112<sup>th</sup> Circle N, Suite 100  
St. Petersburg, Florida 33716  
USA



800-451-9444 • 727-530-3602 • 727-539-0550 [fax]  
www.Sensidyne.com • info@sensidyne.com

**Authorized EU Representative**

Schauenburg Electronic Technologies GmbH  
Weseler Str. 35 · 45478  
Mülheim-Ruhr Germany

+49 (0) 208 9 99 10 • +49 (0) 208 5 41 10 [fax]  
www.schauenburg.com • international@schauenburg.com